How to use PANBIO COVID-19 Rapid antigen tests

BEFORE

Blow your nose and wash your hands with soap

1 SET UP

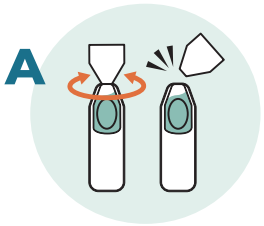

Twist the top off the buffer liquid vial

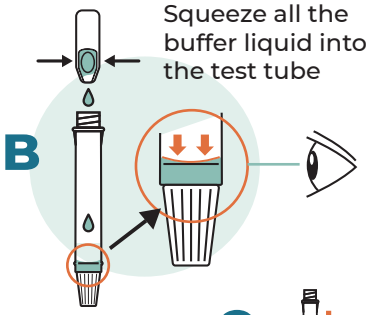

Squeeze all the buffer liquid into the test tube

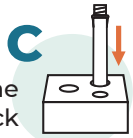

Place filled test tube in the assembled test tube rack

2 COLLECTION

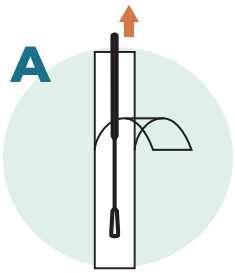

Peel down and remove nasal swab

B Insert nasal swab up to **1 inch (2.5 cm)** from edge of nostril

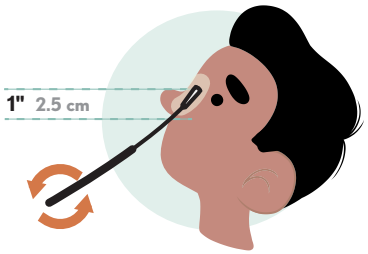

Roll **5 times** in **each nostril** (right and left nostril)

3 PREPARATION

A

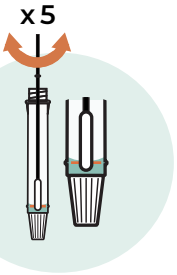

Swirl the swab gently and slowly in the liquid **5 times**, pressing it against the sides of the tube

B

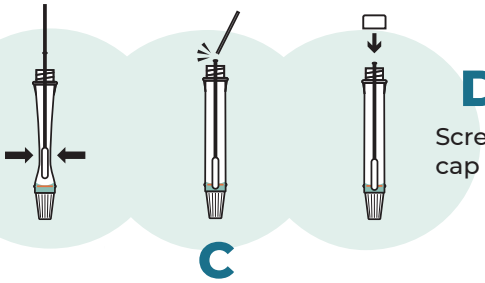

Gently pinch the tube to extract the fluid while removing the swab

C Break the swab at the break-point where there is an indentation and leave the swab in the tube

D Screw the blue cap onto tube

4 TESTING

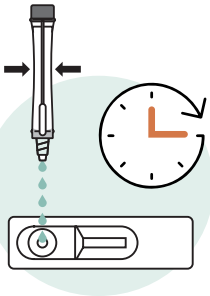

Place **5 drops** in the rapid response cartridge and wait **15 minutes**, no more

** Place the test on a flat surface and do not touch it during the waiting time*

Here is an example of a positive test, negative and an invalid test

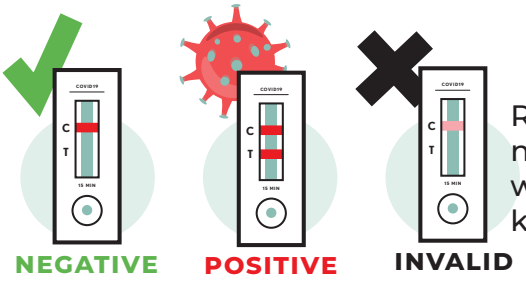

Redo the nasal swab with a new kit

Please call the COVID-19 Infoline: 1-866-855-2811

COVID660_RT-PANBIO_20220307_V3

ᓇᕐᓴᒐᓂᐅᓐ ᐊᓈᓇᑭᒋᖅᑖᓐᓄᑦ
CONSEIL CRI DE LA SANTÉ ET DES SERVICES SOCIAUX DE LA BAIE JAMES
CREE BOARD OF HEALTH AND SOCIAL SERVICES OF JAMES BAY

(Graphics adapted from Nunavik Regional Board of Health and Social Services - NRBHSS)

For more information:
CREEHEALTH.ORG/COVID